

# Non-Indicating Pressure Transmitters



## TPS20 Series PRODUCT MANUAL

**For your safety, read and follow the considerations written in the instruction manual, other manuals and Autonics website.**

The specifications, dimensions, etc are subject to change without notice for product improvement. Some models may be discontinued without notice.

### Features

- Excellent corrosion resistance with stainless steel housing
- High accuracy  $\pm 0.3\%$  F.S.
- Various connection method
  - Head type, DIN connector type, connector cable type
- Various user friendly function
  - Built-in zero-point, span adjustment (head type)

### Safety Considerations

- Observe all 'Safety Considerations' for safe and proper operation to avoid hazards.
- ⚠ symbol indicates caution due to special circumstances in which hazards may occur.

**⚠ Warning** Failure to follow instructions may result in serious injury or death.

- 01. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc).**  
Failure to follow this instruction may result in personal injury, economic loss or fire.
- 02. Do not use the unit in the place where flammable/explosive/corrosive gas, humidity, direct sunlight, radiant heat, vibration, impact, or salinity may be present.**  
Failure to follow this instruction may result in explosion or fire.
- 03. Do not disassemble or modify the unit.**  
Failure to follow this instruction may result in fire or electric shock.

**⚠ Caution** Failure to follow instructions may result in injury or product damage.

- 01. Do not apply beyond rated pressure.**  
Failure to follow this instruction may result in product damage.
- 02. Use the unit within the rated specifications.**  
Failure to follow this instruction may result in fire or product damage.
- 03. Fix the cable through the cable connection part and do not turn the cable of the unit.**  
Failure to follow this instruction may result in product damage.
- 04. Keep the product away from metal chip, dust, and wire residue which flow into the unit.**  
Failure to follow this instruction may result in fire or product damage.
- 05. Check 'Connections' before wiring.**  
Failure to follow this instruction may result in explosion or fire.
- 06. This product is designed to detect the pressure of noncorrosive medium. Do not use for corrosive medium.**  
Failure to follow this instruction may result in product damage.
- 07. Use a dry cloth to clean the unit, and do not use water or organic solvent.**  
Failure to follow this instruction may result in fire or electric shock.

### Cautions during Use

- Follow instructions in 'Cautions during Use'.  
Otherwise, it may cause unexpected accidents.
- Power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- When installing the unit on pipe line, use the hexagon part of connections not to turn the unit with a pipe wrench. Do not use the unit with strong vibrations.
- Store the unit at the place without moisture, dust, and vibration.
- This product is not needed to take maintenance because there is no moving part. But it needs to take maintenance once a year as below instructions even though inside of pressure pipe is normally clean.
  1. Check the broken status of outside.
  2. Check the pressure slot, cleanliness inside, and corrosion state.
  3. Short each terminal and check the insulation resistance between the case and power.

- 
- Technical drawing of the M12 Connector assembly. The side view shows a cylindrical component with a G3/8 fitting on the left and an M12 Connector on the right. Dimensions include a total length of 80.5, a distance of 71.5 from the G3/8 fitting to the connector, and a distance of 18 from the G3/8 fitting to the start of the main body. The end view on the left shows a circular flange with a central hole of diameter Ø24 and a hexagonal base labeled HEX22.

## Specifications

Series	TPS20		
Applicable medium	Gas, liquid, fluid (except corrosive environment of SUS316)		
Pressure Type	Gauge pressure	Absolute pressure	Compound pressure
Rated Pressure range <sup>01)</sup>	0 to 0.2, 350 kgf / cm <sup>2</sup> (different by model)	0 to 1.0, 35 kgf / cm <sup>2</sup> (different by model)	-1.03 to 0, 35 kgf / cm <sup>2</sup> (different by model)
Max. pressure	300 % of max. rated pressure		
Response time	≤ 100 ms		
Protection circuit	Reverse polarity protection circuit		
Tightening torque	≥ Industrial plug 5 N		
Material	Sealing: SUS316, O-ring: fluoro rubber, diaphragm: SUS316, connection: SUS316		
Connection	+, -		
Case structure	Drip-proof structure		
Certification	CE UK		
Unit weight (packaged)	≈ 320 g (≈ 350 g), based on head type		

01) It is different by model. Refer to 'Ordering Information'.



Power supply	15 - 35 VDC≡
Allowable voltage range	90 to 110% of rated voltage
Current consumption	≤ 50 mA
Current Output	DC 4 - 20 mA
Linearity	± 0.3 % F.S. (-10 to 50 °C), ± 0.5 % F.S. (50 to 70 °C)
Hysteresis	± 0.3 % F.S.
Temp. Zero Shift	± 0.03 % F.S.
Temp. Span Shift	± 0.03 % F.S. (at 25 °C)
Load resistance	≤ 600 Ω
Insulation resistance	≥ 100 M.Ω (500 VDC≡ megger)
Dielectric strength	Between the charging part and the case: 500 VAC~ 50 / 60 Hz for 1 minute
Vibration	1.5 mm amplitude at frequency of 10 to 55 Hz in each X, Y, Z direction for 2 hours
Shock	95 m/s <sup>2</sup>
Ambient temperature	-10 to 70 °C, storage: -10 to 70 °C (no freezing or condensation)
Ambient humidity	5 to 95% RH, storage: 5 to 95% RH (no freezing or condensation)

## Troubleshooting

Fault	Troubleshooting
No outputs	Check the power supply. Check the polarity (+, -) when wiring cable. Check the connection part.
Abnormally fluctuating output	Check the power supply. Check the supplied pressure. Check the pressure line.
Out of zero point output value	Check the power supply. Check the load resistive value of current output type for a receiver is over 600 Ω. Check the measuring point and transmission distance. Check the line resistance is below 600 Ω.

## Sold Separately: M12 Connector Cable

- For detailed information, refer to the 'M8/M12 Connector Cable' manual.

Appearance	Power	Connector 1	Connector 2	Length	Feature	Model
	DC	M12 (Socket-Female) 4-pin	3-wire	2 m	PVC	CID3-2
				5 m		CID3-5
	DC	M12 (Socket-Female) 4-pin, L type	3-wire	2 m	PVC	CLD3-2
				5 m		CLD3-5

## Pressure Conversion Table

	Pa	kgf/cm <sup>2</sup>	mmHg	mmH <sub>2</sub> O	psi	bar	inHg
Pa	1	0.000010197	0.007501	0.101972	0.00014504	0.00001	0.0002953
kgf/cm <sup>2</sup>	98066.5	1	735.5592	10000.0005	14.223393	0.980665	28.959025
mmHg	133.3224	0.001359	1	13.595099	0.019337	0.001333	0.039370
mmH <sub>2</sub> O	9.80665	0.000099	0.073556	1	0.00142	0.000098	0.002896
psi	6894.733	0.070307	51.71475	703.016716	1	0.068947	2.036014
bar	100000.0	1.019716	750.062	10197.1626	14.503824	1	29.529988
inHg	3386.388	0.034532	25.40022	345.315507	0.491156	0.033864	1

- 1,000,000 Pa = 1,000 kPa = 1 MPa